19" MULTI-COLOR LCD RADAR
FAR-2157/2167DS
(50 kW)   (60 kW)

- ▶ High output power radar delivers the long-range detection capability
- ▶ Advanced signal processing for improved detection of small targets, buoys and birds
- ▶ Straightforward operation using customizable Function & Direct Key, trackball/wheel palm module and rotary controls
- ▶ Up to four radar sets can be networked via Ethernet without an extra device
- ▶ Target trail with its various functions enhances situation awareness of vessel traffic around the vessel
- ▶ All Echo Area Mode lets the operator observe wider picture area around the vessel

FURUNO high-performance radar for fishing improved detection

The FAR-2157 (X-band) and 2167DS (S-band) are the latest additions to the world-renowed FAR-21x7 series radar. Their software and hardware are optimized for fishing operations, and they carry all the standard functions of the FAR-21x7 series.

Both radar incorporate state-of-the art signal/graphics processing technology together with auto tuning, logarithmic amplifiers and anti-clutter controls, for superb detection on all ranges. Thanks to its graphics processing technology, the echoes are expressively presented with 32 gradations in accordance with reflected echo strength. The anti-clutter controls suppress the unwanted echoes from waves, rain and clouds. The combination of these technologies ensures a clear image, even in rough seas.

The FAR-2157 and 2167DS deliver a variety of useful functions to skippers. Direct Key control allows the operators to activate specific settings with just a few keystrokes. This feature is particularly important to oneman fishing operations, where quick setup of the radar according to sea conditions is vital.

Target Tracking (TT) and echo trail functions are available to monitor the movement of targets precisely. With TT, the targets are automatically or manually acquired, and their movements, CPA and TCPA are computed and shown in the cells on the right hand side of the screen.(For acquisition of smaller targets such as birds and buoys, they have to be manually acquired.) In addition, those ship's tracks can be indicated in color, which the operators can select from eight different colors. For extended monitoring of target movement, the echo trail feature is recommended. The trail color can be shown in 12 colors. When the multi color trail is selected, the trail color changes over time. True motion echo trail is also available.

The FAR-2157 and 2167DS consist of an antenna, 19" LCD display, processor and control unit. For those who prefer a different monitor, the BlackBox radar configuration is also available. The control unit is selectable from Full-keyboard Control Unit and Palm Control Unit. With a Palm Control Unit, all operations can be done by the trackball.

BlackBox configuration types are also available

The BlackBox radar, consisting of an antenna, processor and control unit. They work with virtually any size multi-sync SXGA (1280×1024) LCD monitor. FURUNO also offers a premier line of high-quality LCD monitors that are a perfect complement to the FAR-2157-BB and 2167DS-BB radar systems.

Control unit with
optional 23.1" monitor MU-231

vessels delivers
of vessels, birds, buoys, and net floats.

S-band

S-band antenna for FAR-2167DS
60 kW TR up
(10 or 12 ft ANT selectable)

The FAR-2167DS is a high-performance S-band radar with 60 kW output power.
Detection and tracking of sea birds in a distance have always been very important for commercial fishermen. The noticeable advantage of the FAR-2167DS is its capability to detect flocks of seabirds. S-band radar also assures target detection in adverse weather where an X-band is heavily affected by sea or rain clutter.
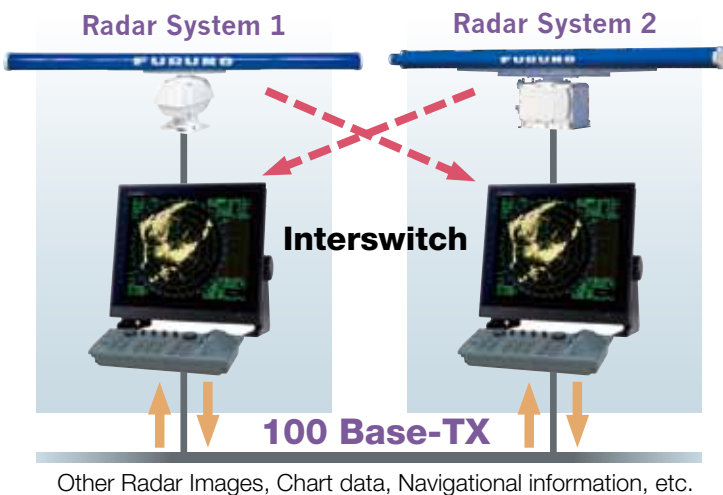
X-band

X-band antenna for FAR-2157
50 kW TR up
(8 or 10 ft ANT selectable)

The FAR-2157 radar is suitable for detection of vessels and buoys under most sea conditions. The 50 kW high-power output enables long range detection and its long antenna delivers high-resolution images.

100 Base-TX Ethernet Network System

Radar System 1   **Radar System 2**

Interswitch

100 Base-TX

Other Radar Images, Chart data, Navigational information, etc.

The radar can be connected to an Ethernet network for a variety of user requirements. Up to four radar systems both X- and S-band can be networked without using an extra device.
In addition, the essential navigational information including the electronic chart, L/L, COG, SOG, STW, etc. can be shared within the network.

| Independent	Mix	Repeater
Antenna Unit	Antenna Unit	Antenna Unit
A B	A B	A B
A B	A B	A A
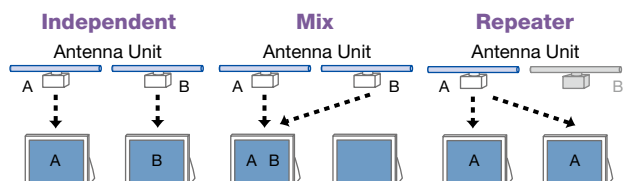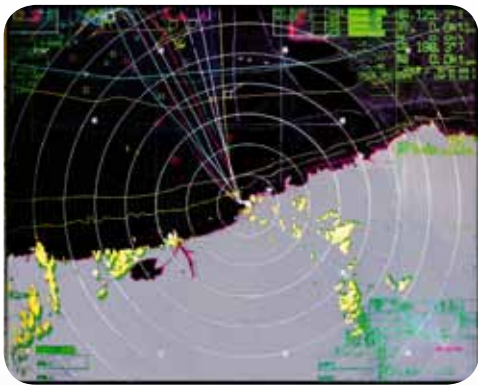
All Echo Area Mode

The radar has three modes to display the echo area: CIRCLE, WIDE, and ALL. With "All" Echo Area Mode, the entire screen is filled with an echo image. Its full-screen echo presentation capability allows the operator to observe a wider overview of the surrounding area, a function vital in fishing operations.

Selectable display mode for echo area

CIRCLE	WIDE	ALL
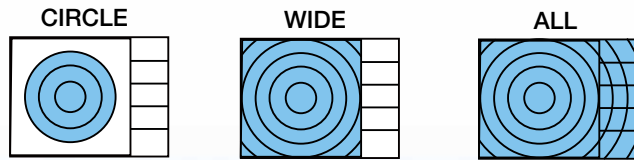
■ : the area where radar echo is displayed

Chart Overlay

Chart overlay display with FURUNO chart

The radar incorporates a Video Plotter that displays electronic charts, plots own and other ship's tracks, enables entry of waypoints/routes and makes a radar map. Chart is displayed in combination with radar images. FAR-2157 and 2167DS are compatible with FURUNO or Navionics charts.

Target Trail

The target trails feature generates a monotone or gradual shading afterglow on all objects on the display. The trails are useful in showing own ship movement and other ship tracks. True* or Relative echo trail is available in Relative Motion. (only True echo trail is selectable in True Motion)
Even if the plotting interval or display setting are changed, trails remain on the screen and the trail length will change according to the radar setting.
*Heading sensor required

Long Trail Mode
Target trails are memorized for duration of your selected trail time from 15 seconds to 48 hours.

Narrow Trail Mode
The target trails can be painted with thinner lines if desired. This is useful when there are a lot of targets on the screen that need to be easily distinguished.

Multi-color Trail Mode
The target trails change their colors in 12 gradations. The color changes as time passes, This makes it easier to know the movement and speed of targets.
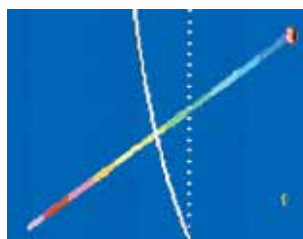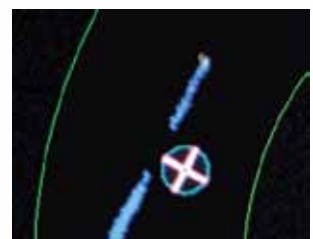

Own Ship Trail OFF
This radar has function to automatically prohibit the unwanted trail which is generated around your vessel according to the sea clutter level.

Trail Eraser
The generated trails of other vessels or sea clutter can be erased with trail eraser. It is useful for deleting unwanted trails that are near your vessel.

Marks and Comments

Marks can be placed on the radar screen to note certain positions of importance. Comments can be placed near the mark to aid in their identification. Marks allow a skipper to grasp the relative position between own vessel and the mark locations.

With this function, a skipper can enter the GPS position data* of the fishing grounds and hazardous objects for navigation such as shallow waters.
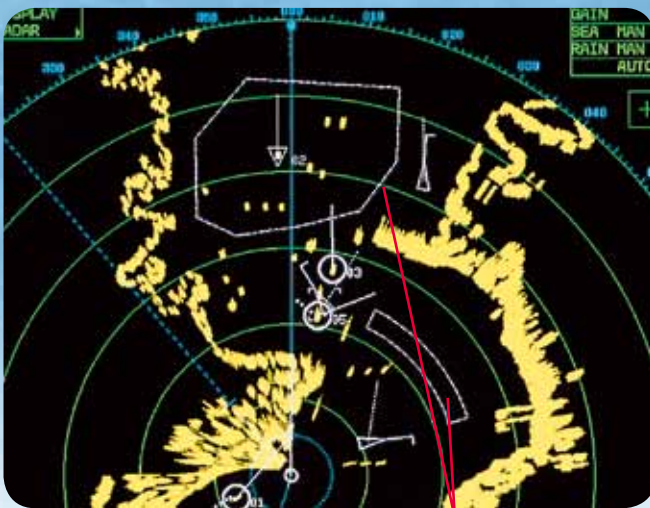
*GPS sensor required

Examples of marks (available in seven colors)

Up to 8 letters can be typed to each mark

Guard Zones

Guard Zones

Automatic Acquisition Zone

Two automatic acquisition zones may be set in a sector or any form. They also act as suppression zones, avoiding unnecessary overloading to the processor and clutter by disabling automatic acquisition and tracking outside them. Targets in an automatic acquisition zone are shown with an inverse triangle. The operator can manually acquire important targets without restriction.

Guard Zones and Anchor Watch Zone

Guard Zones generate visual and audible alarms when targets enter the operator set zones. One of the Guard Zones may be used as an anchor watch to alert the operator when own ship or targets drift away from the set zone.

CPA Alarm

The target tracking symbol changes to a triangle when its predicted course (vector) violates the operator set CPA/TCPA. The operator can readily change the vector lengths to evaluate the target movement trend.

Function & Direct Keys

30 often-used functions such as Anti-clutter Control or Echo Stretch, which are customizable, are provided in the pre-set menu. F1 through F3 keys can be set up to access the programs. (Function Keys)

You can also add 10 Direct Keys that memorize up to 10 steps of user-programmable actions on the F4 key. When you are in a specific situation where rapid action is required, you can switch to the saved settings quickly with one hand operation.
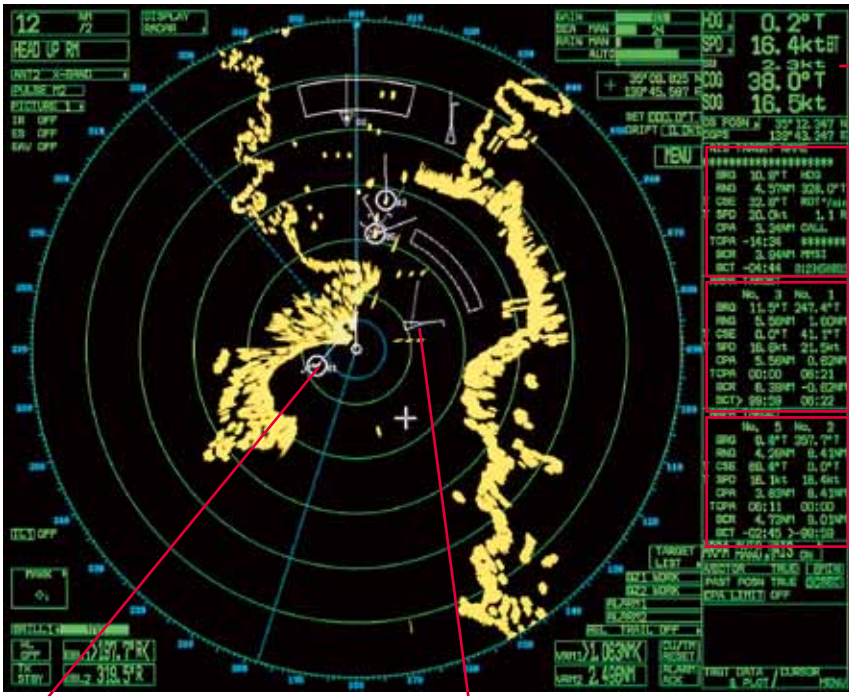

Function & Direct Keys

Presentation Colors

The radar screen can be presented in a selected color for easy observation under all lighting conditions.

TT target automatically acquired | AIS target (selected for data reading)
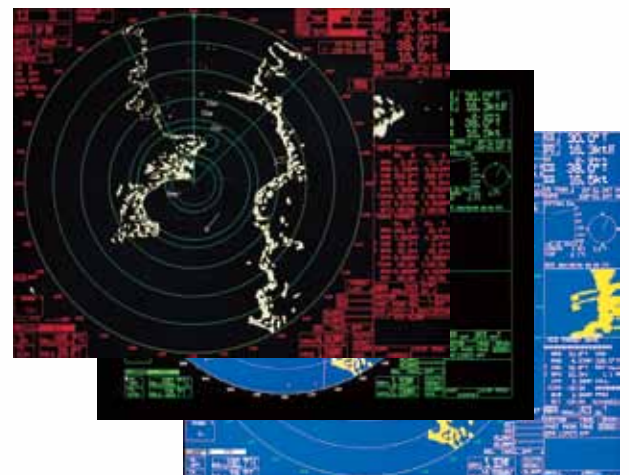
Own ship data cell

DATA Cell 1
AIS information — Water temp, Depth, Wind

DATA Cell 2
Tracking data — Zoom

DATA Cell 3
Tracking data — AIS Information

Target Association (Fusion)

An AIS-equipped ship may be shown on the display by both AIS and TT symbols. This happens because the AIS position is measured by a GPS navigator in L/L while the TT target blip and data are measured by range and bearing from own ship. When the symbols are within an operator-set criteria, the TT symbol is merged into the AIS symbol. The criteria is determined by the differences in range, bearing, course, speed, etc.

Data Display

A variety of navigational information which is vital for fishing vessels, including own ship status, radar plotting data, wind, water temperature and information from other shipborne sensors can be displayed in the data cells on the right hand side of the screen. The FAR-2157 and 2167DS radar have a unique zoom function which enlarges a part of the radar image twice or three times in size.

Symbols for AIS

SOG (Speed over Ground) and COG (Course over Ground) vector *1

Turning direction (ROT indicator)

Past positions

Heading line *2

*1 Vector shows STW (speed thru water) and CSE (course) when water tracking mode is selected at the radar. the length of the vector changes according to target's speed.

*2 If there is no heading data, the line points in direction of COG.

Sleeping AIS Target | Selected Target

Lost Target | Dangerous Target

Symbols for Target Tracking (TT)

Past positions

A vector appears to show a trend of movement.

Initial stage

Steady tracking

CPA alarm

Lost target (Flashing)

Past Position Display
The Target Tracking displays equally time-spaced dots marking the past positions of any targets being tracked. A new dot is added during preset time intervals until the preset number is reached. AIS also displays past position dots.

Information to be exchanged

Static Data
MMSI (Maritime Mobile Service Identity)
IMO number (Where available)
Call sign & name
Length and beam
Type of ship
Location of position-fixing antenna on the ship

Voyage related data
Ship's draft
Hazardous cargo (type)
Destination and ETA
(at master's discretion)

Short safety-related messages
Free messages

Dynamic data
Ship's position with accuracy indication and integrity status
Coordinated universal time (UTC)
Course over ground (COG)
Speed over ground (SOG)
Heading
Navigation status (manual input)
Rate of turn (where available)
Update rates Dependent on speed and course alternation (2 s – 3 min)

Information to be presented

Bearing from own ship to target in R (Relative) or T (True)
Range from own ship to target
Course Over Ground (COG)
Speed Over Ground (SOG)
Closest Point of Approach of target to own ship (CPA)
Time to CPA (TCPA)
Bow Crossing Range of target (BCR)
Bow Crossing Time of target (BCT)

Selecting the shape of TT symbols

After tracking a target, you can select and change the Target Tracking (TT) symbol shape by placing the cursor on the symbol and hitting the "TARGET DATA" key. It is useful to change the TT symbol to distinguish vessels and identify groups of related targets.

The TT symbols are selectable from 10 shapes.

SPECIFICATIONS OF FAR-2157/2167DS

ANTENNA RADIATORS

1. Type   Slotted waveguide array

2. Beamwidth and sidelobe attenuation

	X-Band		S-Band	
Radiator Type	XN-4A	XN-5A	SN-30AF	SN-36AF
Length	8 ft	10 ft	10 ft	12 ft
Beamwidth (H)	0.75°	0.75°	2.3°	1.8°
Beamwidth (W)	20°	20°	25°	25°
Sidelobe (within ± 10°)	-28 dB	-26 dB	-24 dB	-24 dB
Sidelobe (outside ± 10°)	-32 dB	-30 dB	-30 dB	-30 dB

3. Rotation

	X-Band		S-Band
Rotation	18/22 rpm	22 rpm	21/26 rpm
Gear Box	RSB-106	RSB-107	RSB-111 RSB-112

RF TRANSCEIVER

1. Frequency
X-band: 9410 MHz ± 30 MHz
S-band: 3050 MHz ± 30 MHz

2. Output power

	FAR-2157	FAR-2167DS
Output Power	50 kW	60 kW
Transceiver	RTR-083	RTR-084

3. Pulselength/PRF

Range scale (nm)	Pulse length (μs)	PRF (Hz)
0.125, 0.25	0.08	1900
0.5	0.08	1900
0.75, 1, 1.5, 2	0.08, 0.2	1100, 1900
3, 4	0.2, 0.6	1100, 600
6, 8	0.6, 1.2	600
12, 16, 24	0.6, 1.2	600
32, 48, 72, 96, 120	1.2	600

4. I.F.   60 MHz

5. Bandwidth   Short pulse: 40 MHz
    Medium pulse: 10 MHz
    Long pulse: 3 MHz

RADAR DISPLAY

1. Display*
Display: 19" color LCD (SXGA 1280×1024 pixels)
Effective area: 376 × 301 mm approx.
Echo Color: Yellow or green in 32 levels

2. Range scales and ring intervals (nm)

Range	.125, .25, .5, .75, 1, 1.5, 2, 3, 4, 6, 8, 12, 16, 24, 32, 48, 72, 96, 120
Ring	.025, .05, .1, .25, .25, .25, .5, .5, 1, 1, 2, 2, 4, 4, 8, 8, 12, 16, 20

3. Presentation modes
Head-Up, Cursor-gyro, Course-Up, North-Up,
True Motion (sea or ground stabilization)

4. Parallel index lines
1, 2, 3 or 6 lines (selectable in menu)

8. Radar map
20,000 points to create coastlines, own ship safety contour, marks, comments, isolated underwater dangers, buoys, traffic routing systems, prohibited areas, fairways.

TARGET TRACKING

1. Acquisition
100 targets (e.g. manually 50, automatically 50)

2. Tracking
Automatic tracking of all acquired targets in 0.2 to 24 (32) nm

3. Guard zone
Two zones, one of them 0.5 nm depth

4. Vector
True or relative 30 s, 1-15, 20, 30 min for prediction of target motion

5. Past positions
5 or 10 past positions at intervals of 30 s,1, 2, 3, 6 min.

6. Collision warning
CPA limit: 0.2 - 10 nm, TCPA limit: 0 - 99 min.

7. Trial maneuver
Dynamic or static, with selected delay time.

AIS DISPLAY

1. Symbols
Sleeping, Activated, Dangerous, Selected, Lost targets

2. Number of targets
1,000 targets max.

3. Data indication
Basic and expanded data

POWER SUPPLY (specify when ordering)

1. Processor Unit
100-115/220-230 VAC, 1ø, 50/60 Hz
3.0 A (100-115 VAC)
1.5 A (200-230 VAC)
440 VAC, 1ø, 50/60 Hz with optional transformer RU-1803

2. Display Unit*
100-230 VAC, 1ø, 50/60 Hz

3. Antenna Unit
FAR-2157:
24 VDC
200 VAC, 3ø, 50 Hz; 220 VAC, 3ø, 60 Hz
100/110/115/220/230 VAC, 1ø, 50/60 Hz with optional rectifier RU-3423
110 VAC, 3ø, 60 Hz with optional transformer RU-5693
220 VAC, 3ø, 50 Hz with optional transformer RU-6522
440 VAC, 3ø, 50 Hz with optional transformer RU-5466-1
FAR-2167DS:
200 VAC, 3ø, 50 Hz, 220 VAC, 3ø, 60 Hz
380 VAC, 3ø, 50 Hz, 440 VAC, 3ø, 60 Hz
110 VAC, 3ø, 60 Hz with optional transformer RU-5693
220 VAC, 3ø, 50 Hz with optional transformer RU-6522
440 VAC, 3ø, 50 Hz with optional transformer RU-5466-1
440 VAC, 1ø, 50/60 Hz with optional transformer RU-1803

STANDARD

1. Monitor Unit MU-190*
2. Processor Unit RPU-013
3. Standard type Control Unit RCU-014
   Trackball type Control Unit RCU-015
   (Specify when ordering)
4. Antenna Unit with cable, 15/30/40/50 m (Specify when ordering)
5. Power Supply unit PSU-006
6. Standard Spare Parts and Installation Materials

OPTION

1. Gyro Converter GC-10-2 (built in Processor Unit)
2. Stepdown Transformer Unit RU-1803/5466-1/5693/6522
3. Chart/Memory Card Interface Unit CU-200
4. External Alarm Buzzer OP03-21
5. Remote Control Unit RCU-016
6. RAM card 00RAM08MC-005
7. DVI-RGB Converter Kit (Buffer board built in) OP03-180-1/2
8. Cable Assembly
9. Bracket Assembly (w/knobs)
10. Hood Assembly
11. Flush Mount Kit (for fixing at front)

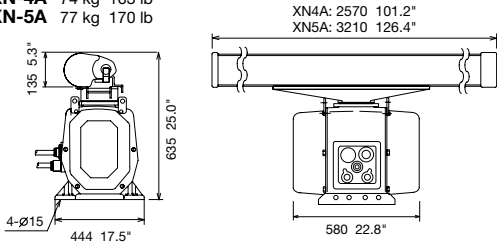*BlackBox types is not equipped with a monitor unit. Procure one locally.

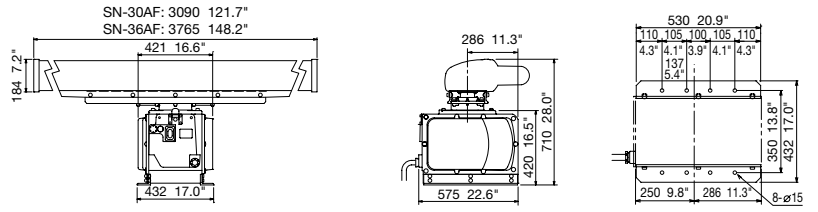Picture credit in this brochure:
ALBACORA SA.
PESQUERAS ECHEBASTAR S.A.

Antenna Unit for FAR-2157
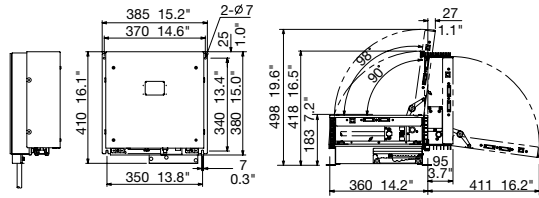
XN-4A 74 kg 163 lb
XN-5A 77 kg 170 lb

XN4A: 2570 101.2"
XN5A: 3210 126.4"

135 5.3"
635 25.0"
4-Ø15
444 17.5"
580 22.8"

Antenna Unit for FAR-2167DS

SN-30AF 127 kg 280 lb
SN-36AF 133 kg 293.2 lb

SN-30AF: 3090 121.7"
SN-36AF: 3765 148.2"

421 16.6"
184 7.2"
432 17.0"
286 11.3"
710 28.0"
420 16.5"
575 22.6"

530 20.9"
110 105 100 105 110
4.3" 4.1" 3.9" 4.1" 4.3"
137 5.4"
350 13.8"
432 17.0"
250 9.8" 286 11.3"
8-Ø15

Processor Unit

RPU-013 10 kg 22 lb

385 15.2"
370 14.6"
2-Ø7
25 1.0"
27 1.1"
410 16.1"
340 13.4"
380 15.0"
498 19.6"
418 16.5"
183 7.2"
350 13.8"
7 0.3"
90°
95 3.7
360 14.2"
411 16.2"

Control Unit
Full-keyboard type

RCU-014 3.7 kg 8.2 lb

308 12.1"
398 15.7"
136 5.4"
180 7.1"
4-Ø4
39 1.5"
54 2.1"
92 3.6"
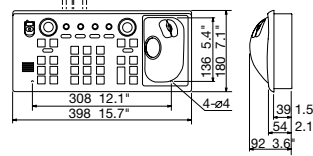
Trackball type

RCU-015 2.4 kg 5.3 lb

110 4.3" 4-Ø4
160 6.3"
136 5.4"
180 7.1"
35 1.4"
50 2.0"
89 3.5"
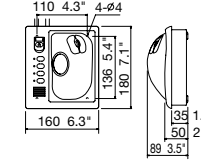
Remote Control Unit

RCU-016 2.4 kg 5.3 lb

110 4.3" 4-Ø4
160 6.3"
136 5.4"
180 7.1"
35 1.4"
50 2.0"
89 3.5"
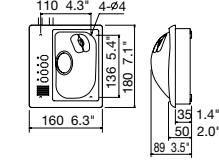
Display Unit MU-190 (BlackBox types do not include the display)

Bracket mount 11.0 kg 24.3 lb

450 17.7"
217 8.5" 273 10.7"
100 3.9" 109 4.3"
397 15.6"
427 16.8"
563 22"
441 17.4"
433 17"
432 17"
470 18.5"
Hood (option)
14 0.6"
160 6.3"

Panel mount 8.8 kg 19.4 lb

199 7.8" 109 4.3"
397 15.6"
399 15.7"
5.5 0.2"
450 17.7"
Hood (option)

442 17.4"
446 17.6" (with hood)
389 15.3"
4-Ø18
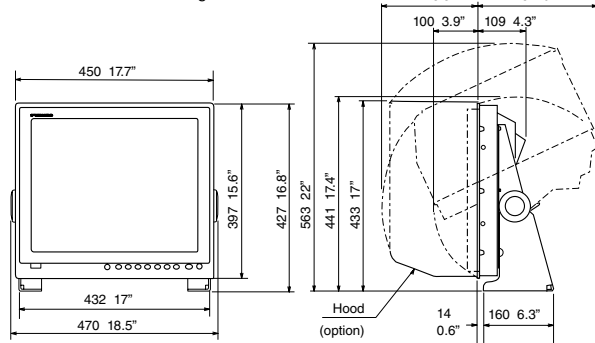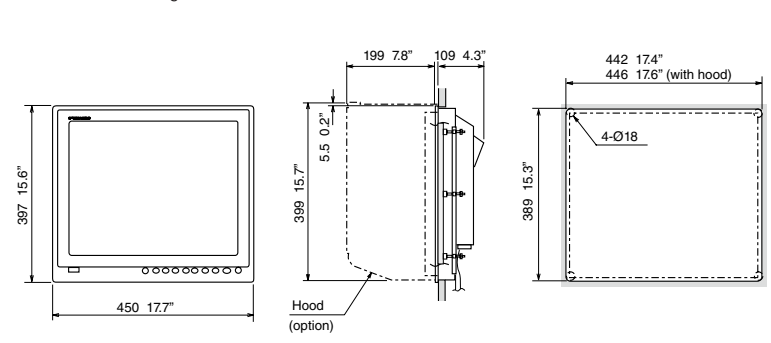
INTERCONNECTION DIAGRAM

Antenna Unit (Specify when ordering)
For FAR-2157/2167DS

Commercial Monitor**

Display Unit MU-190

Power Supply Unit PSU-006

Remote Control Unit RCU-016

Full-keyboard Control Unit RCU-014

Trackball Control Unit RCU-015

10/20/30 m

03S-9610 10/20/30 m

250V-DPYCY-1.5

DVI-D/D SINGLELINK5M 5 m
DVI-D/D S-LINK10M Max 10 m

RW-9600 Max 100 m

Processor Unit RPU-013

Gyro Interface GC-10

IEC 61162-1 250V-TTYC-1 → GP-150 (Position, SOG, COG)
SDME (STW for ARPA)

IEC 61162-1 250V-TTYC-4 → AIS FA-150

IEC 61162-1 250V-MPYC-7 → Gyro Compass

Gyro Converter AD-100 → Satellite Compass SC-50/110

Ethernet 100Base-TX → Hub HUB-100 → FAR-21x7/28x7
Memory Card Interface Unit CU-200

24 VDC
110 VAC, 3ø, 60 Hz*
200 VAC, 3ø, 50 Hz
220 VAC, 3ø, 60 Hz
380 VAC, 3ø, 50 Hz
440 VAC, 3ø, 60 Hz
100-115/220-230 VAC, 1ø, 50/60 Hz

100-230 VAC, 1ø, 50/60 Hz

100-115 VAC, 1ø, 50/60 Hz
220-230 VAC, 1ø, 50/60 Hz

——— Option or Shipyard Supply
------- Power

Specify power supply when ordering
*Optional transformer required
**For FAR-2157-BB/2167DS-BB

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE
All brand and product names are registered trademarks, trademarks or service marks of their respective holders.