


Sales Bulletin

Attention: All FURUNO Distributors/Subsidiaries

SB No: FSB16-0014

Number of Pages: 10

Date: May 19, 2016

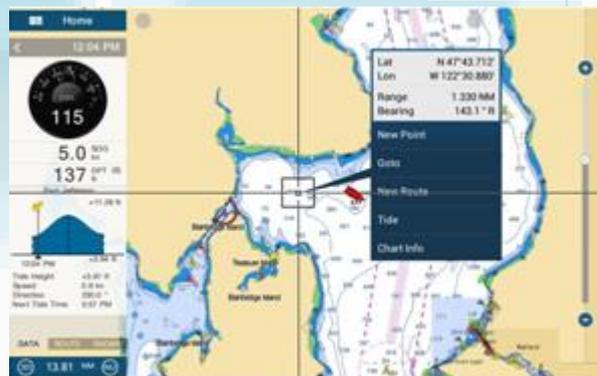

MCU-004 New Remote Control Unit

INDEX

1. Specifications

1-1 Standard Comprising

1-2 Technical Specifications

2. Operation – User Interface

2-1 Getting Started – NavNet TZtouch/2

2-2 Keys and Functions – Basic Operations

2-3 Cross Cursor

2-4 General Limitations and Notes

3. Installing MCU-004

3-1 Dimensions

3-2 Flush Mounting

3-3 Interconnection

4. MCU-004 with TZT9/14/BB Versions

The **MCU-004** is a new remote control unit for use with **NavNet TZtouch (Model: TZT9/14/BB)** and **TZtouch2 (Model: TZTL12F/15F)**. Featuring a large rotary knob with joystick, the MCU-004 offers the expandability of hardware key operation to the multi touch operation of the TZT9/14/BB and TZTL12F/15F, making it the best supplemental tool to multi touch operation. This document describes the basic information on specifications, operations, and installation of the MCU-004.



Model: MCU-004



Screen Image from TZTL12F

1. Specifications

1-1 Standard Comprising

The **MCU-004 (00002943000)** comes with the components shown at right.

Name	Type	Qty
Remote control unit	MCU-004	1
Self-tapping screw	4x16 SUS 304	4
Screw cap	19-032-3508-3	4
Hard cover	19-032-3509-3	1
User's Guide (English)		1

1-2 Technical Specifications

Interface	USB2.0
Cable Length	3 m
Power	Consumption: 270 mA (max), power supply via USB port
Water Proof	Front : IP56 Rear : IP22
Operating Temperature	-15 to +55
Relative Humidity	93% or less at 40 (without internal fogging)
Mounting	Flush mount from the front side (See Section 4-2)

2. Operation – User Interface

2-1 Getting Started – NavNet TZtouch/2

To make use of the MCU-004, use the following TZT9/14/BB and TZTL12F/15F software versions.

Model	Version	Remarks
TZT9/14/BB	v4.11	The TZT9/14/BB v4.11 is the currently available latest software, and v4.21 is upcoming software in June 2016 for compatibility with new Radar Sensors DRS4D-NXT and DRS6A X-Class. The MCU-004 can operate the TZT9/14/BB, but some keys will not work yet. See Section 4 for details.
	v4.21	
	v5.xx	We are planning to add functionality of unavailable keys with v4.11/4.21.
TZTL12F/15F	v3.01	This version also becomes compatible with new Radar Sensors DRS4D-NXT and DRS6A X-Class.

2-2 Keys and Functions – Basic Operations

The MCU-004 consists of **10 hardware keys** to control the TZT9/14/BB and TZTL12F/15F as described below.

MCU-004	No	Keys	Descriptions
	1	STBY / AUTO	Sets the NAVpilot-700 to STBY or AUTO modes
	2	HOME & BRILL	Short press to access the Home page Long press to open the Brilliance control box
	3	Switch Disp.	Switches an active display
	4	FUNC	Acts as Function Gesture
	5	CURS / SCRL	Switches the joystick functions between Cursor and Scroll
	6	CENTER	Sets the ship in the center of the screen
	7	Rotary Knob	Acts as rotating RotoKey™
	8	Joystick	Moves a cursor in 8 directions
	9	Edge	TZT9/14/BB: Same as pushing RotoKey™ key TZTL12F/15F: Activates edge-swipe functions
	10	CANCEL & MOB	Short press to cancel Long press to enter an MOB point

Differences from MCU-002

The MCU-004 keys work almost the same as the MCU-002 except for the following unique keys and features.

No	Uniqueness with MCU-004 – Overview	MCU-004 vs. MCU-002
1	A buzzer is built in.	
2	The [Switch Disp.] key switches an active display when there are multiple MFDs in the network.	
3	A big rotary knob offers a friendly operation like you rotate the RotoKey™ of TZT9/14/BB.	
4	<p>The [Edge] key works differently between TZT9/14/BB and TZTL12F/15F.</p> <p><u>TZT9/14/BB</u></p> <p>It works the same as the [ENT] key of MCU-002 such as showing RotoKey™ menus and selecting the RotoKey™ or contextual menus.</p> <p><u>TZTL12F/15F</u></p> <p>It activates the edge-swipe functions. Instead of swiping the screen from the top, bottom, right, or left edge, press the [Edge] key and move the joystick in the same direction as you edge-swipe with your finger.</p> <p>[Edge] + Joystick [Up] : Layer</p> <p>[Edge] + Joystick [Down] : Quick Access page</p> <p>[Edge] + Joystick [Right] : Data Box</p> <p>[Edge] + Joystick [Left] : Universal setting options</p>	

(1) Buzzer


A buzzer is built in. When an alarm is generated on the display, the sound will come out from the MCU-004.

(2) Switch Disp.



The [**Switch Disp.**] key switches an active display when there are multiple MFDs in the network.

In the example at right, there are two (2) displays. The MCU-004 is connected to the Display No. 1. By default, the MCU-004 controls the Display No. 1. Pressing the [**Switch Disp.**] key, the MCU-004 can control the Display No. 2.

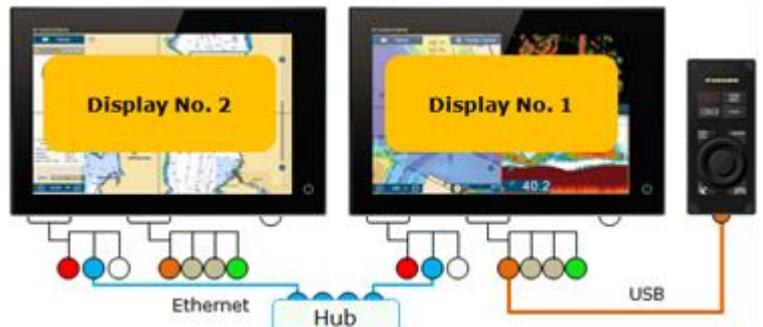

(3) Large Rotary Knob & Joystick



The large rotary knob offers a friendly operation for zoom in/out like you rotate the RotoKey™ of TZT9/14/BB. The big joystick makes it easier to move a cursor. With the TZTL12F/15F v3.01, pushing the joystick selects the highlighted items in contextual menus, settings, Layer, etc.

(4) Edge Key

The [Edge] key works differently between TZT9/14/BB and TZTL12F/15F.

TZT9/14/BB

It works the same as the [ENT] key of MCU-002 such as showing RotoKey™ menus and selecting the RotoKey™ or contextual menus.



TZTL12F/15F

(1) It activates the edge-swipe functions. Instead of swiping the screen from the top, bottom, right, or left edge, press the [Edge] key and move the joystick in the same direction as you edge-swipe with your finger.



(Sample Screen: Layer)

[Edge] + Joystick [Up] : Layer

[Edge] + Joystick [Down] : Quick Access page

[Edge] + Joystick [Right] : Data Box

[Edge] + Joystick [Left] : Universal setting options

(2) The [Edge] key also works to select the highlighted items in contextual menus, etc. like pushing the joystick.

Tip – TZTL12F/15F v3.01 with MCU-002 for Edge Swipe

With the **MCU-002** connected to the **TZTL12F/15F v3.01**, the MCU-002 [ENT] key works the same as the MCU-004 [Edge] key. As introduced in **Sales Bulletin FSB16-0011 Section 7-3, edge swipe** functions are accessible by pressing the MCU-002 [ENT] key and moving the joystick.



2-3 Cross Cursor


While the cursor is operated with the joystick, a cross cursor is shown on the screen.

Cursor Speed Adjustment	Cross Cursor on Screen
 <p>The cursor speed is adjustable in menu. [Menu] (TZT9/14/BB) / [Settings] (TZTL12F/15F) – [General] – [Cross Cursor Speed]</p>	

2-4 General Limitations and Notes


(1) Limitation in Drag by Joystick

The joystick has **NO "drag" function**. The guard zone setting of Radar, which requires to be adjusted by drag, will not be available with the MCU-004 joystick. This operation should be made by touch operations or with a generic mouse/trackball unit.

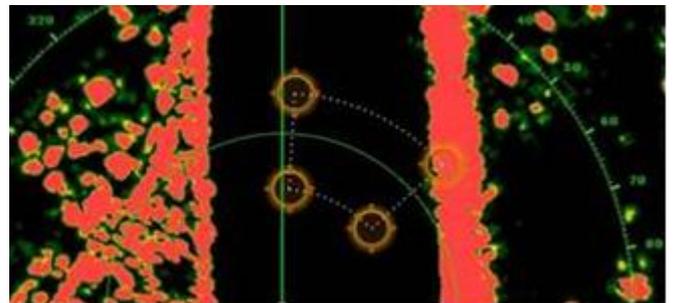


(2) Limitation in 3D Mode – Pan/Tilt

You can turn the screen mode into the 3D mode by selecting [3D Mode] from the contextual menu. However, **you cannot pan/tilt the chart with the MCU-004** because sliding the screen with two fingers is the only way to pan/tilt it. The chart in 3D is always in the default angle as shown at right. Or if you have panned/tilted the chart with two fingers before, the screen will be in the previously set angle.

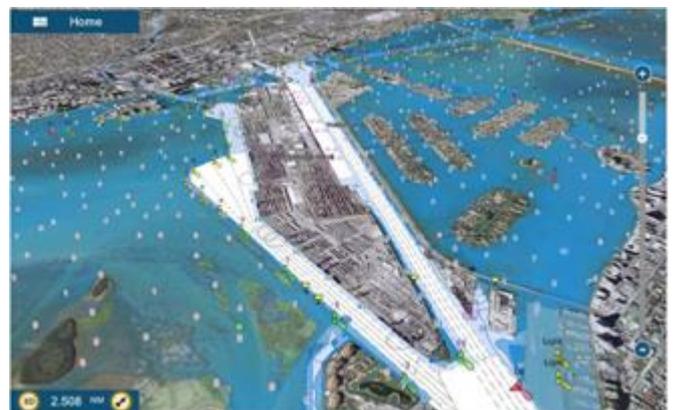

(3) Note on Menu – Second Layer (TZT9/14/BB Only)

The first layer of the Menu can also be scrolled with the [-/▲] and [+/▼] keys, but the second layer cannot. We recommend that the arrow icons on the top and bottom of the layer be pressed with the joystick to scroll the second layer.

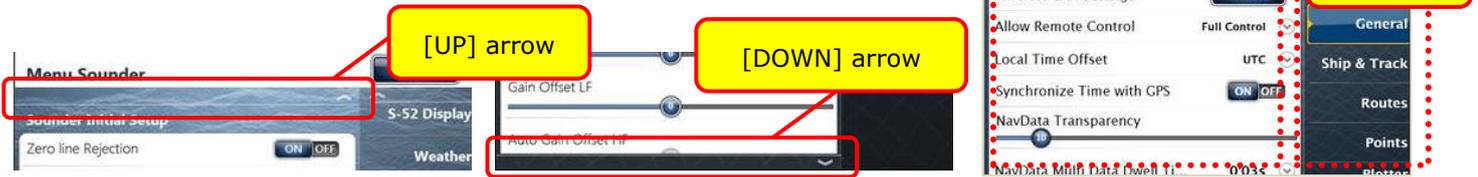


(4) Note on Virtual Keyboard

To enter characters and numbers with a virtual keyboard, use the joystick: Place a cursor on a required key and push the joystick.




(5) Note on Active Window

In the split screen mode, even if you place a cursor on a different screen, the window will not be active. Make sure to press any key, such as joystick, on the screen similar to how you tap the screen to activate it.

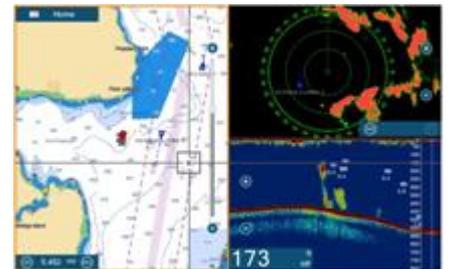


(6) Note on Power On

It is not possible to turn on the display with the MCU-004. Make sure to press the power key of the TZT9/14/BB and TZTL12F/15F. However, the power can be turned off with the operation of [**HOME & BRILL**] key: Press [**HOME & BRILL**] key and select [**Power Off This Device**] or [**Power Off Network**] with the joystick or rotary knob.

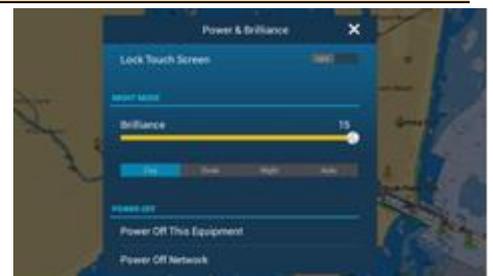

3. Installing MCU-004


3-1 Dimensions

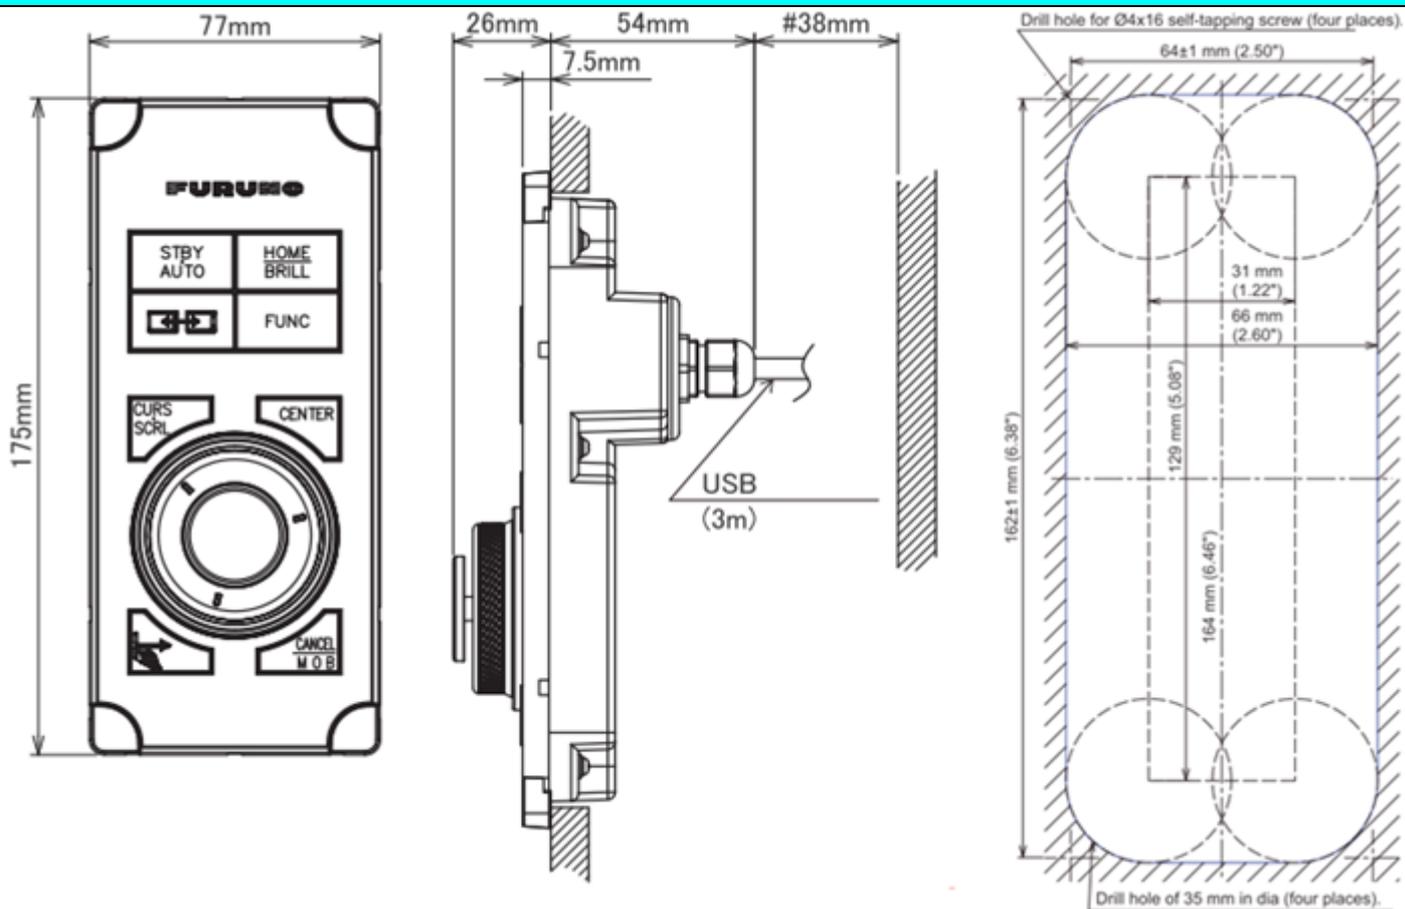

3-2 Flush Mounting


The MCU-004 can be **flush mounted** on a console from the **front side** as shown in the illustration at right.

(Extracted from User's Guide)

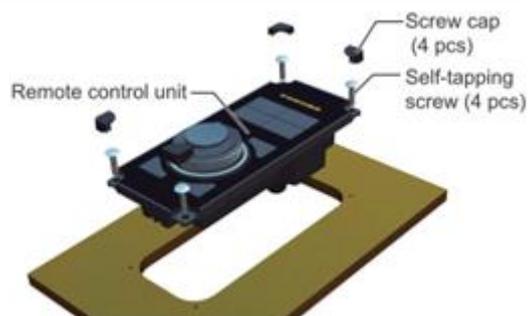

3-3 Interconnection

The MCU-004 can be used with the TZT9/14/BB and TZTL12F/15F by **USB** connection. Connect the MCU-004 to the USB port of the TZT9/14/BB and TZTL12F/15F as shown in the following examples.

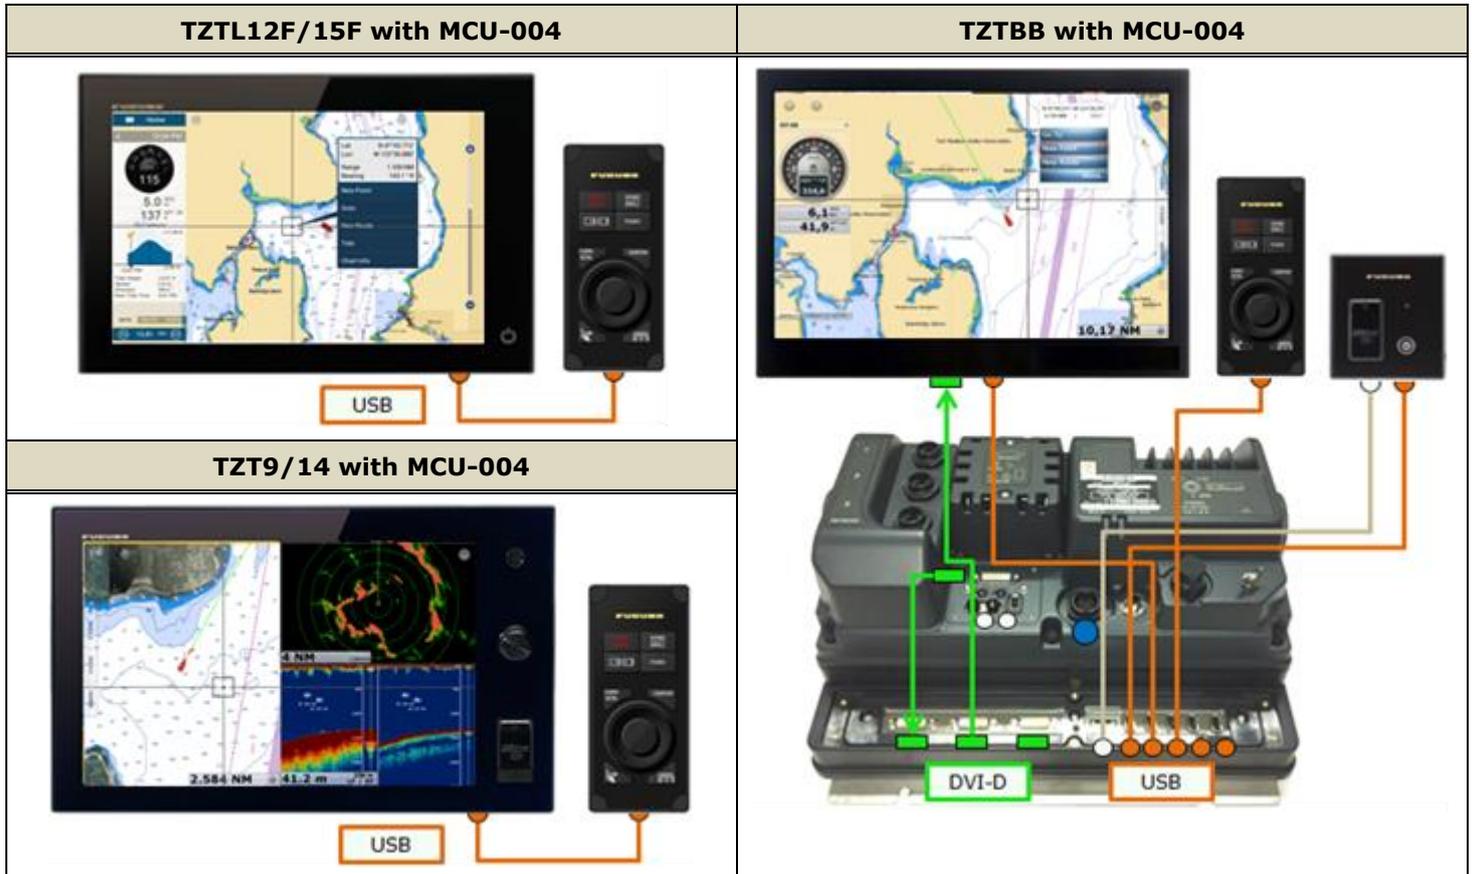


Note:

The maximum consumption current of this unit is 270 mA. To use a USB hub to connect multiple sets of MCU-004, select a USB hub considering its supply current.


Example 1

A USB hub without external power supply may be used to connect multiple sets of MCU-004 when it has enough supply current for the connected units.

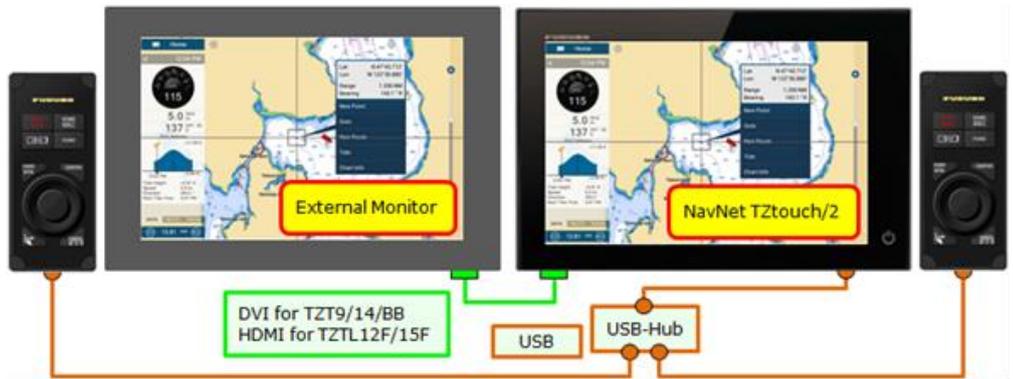

Example 2

A USB hub with external power supply may be used to supply enough power to multiple sets of MCU-004.

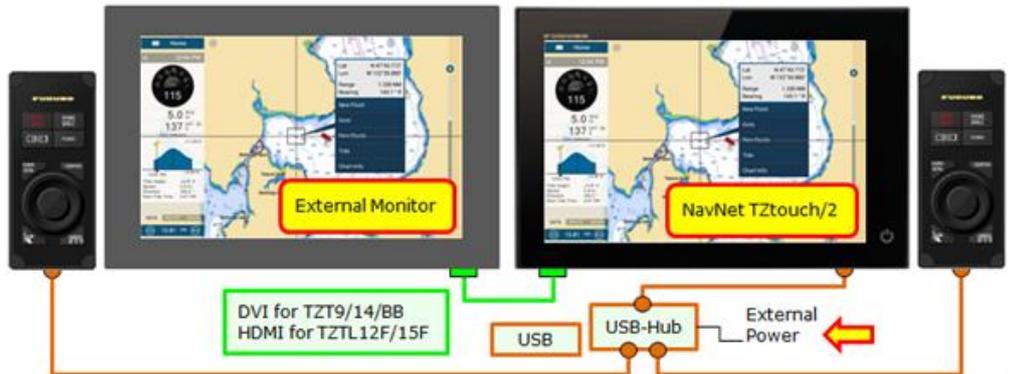

4. MCU-004 with TZT9/14/BB Versions

Version 4.11/4.21


The **TZT9/14/BB v4.11** is the currently available latest software, and **v4.21** is upcoming software in June 2016 for compatibility with new Radar Sensors DRS4D-NXT and DRS6A X-Class. The MCU-004 can operate the TZT9/14/BB v4.11/4.21, but the following key components have a limitation.

No	Items
1	The buzzer sound from the TZT9/14/BB will NOT be generated from the MCU-004 built-in buzzer. (Only the buzzer sound from the TZT9/14/BB is available.)
2	Multi display control with the [Switch Disp.] is NOT available. The display with the MCU-004 connected can be controlled. 



Version 5.xx

The **TZT9/14/BB v5.xx** will have the buzzer and [**Switch Disp.**] key functions.

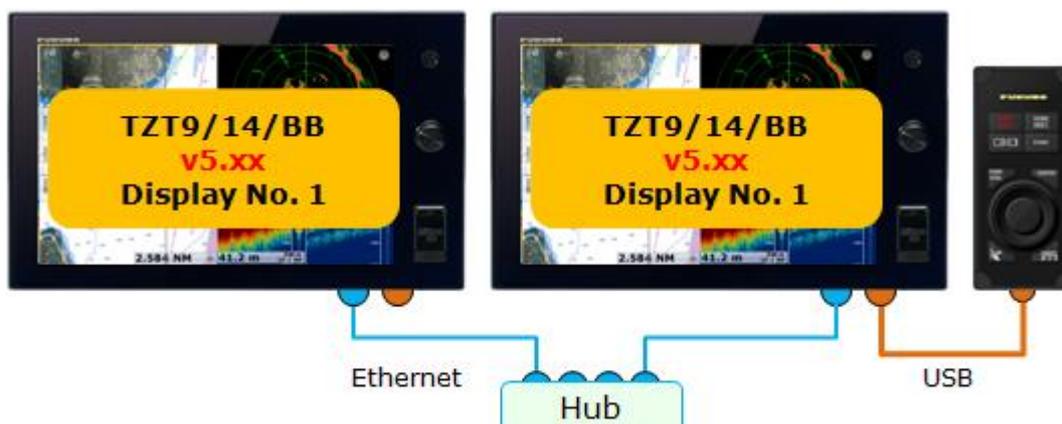

--- END ---

- All brand and product names are registered trademarks, trademarks or service marks of their respective holders.